

CODE	CODE NAME	DESCRIPTION	Address field
AR	AC restoral	AC power has been restored	unused
AT	AC trouble	AC power has been failed	unused
BA	Burglary alarm	Burglary zone has been violated while armed	zone
BB	Burglary bypass	Burglary zone has been violated while armed Burglary zone has been bypassed	zone
BC	Burglary cancel	Alarm has been cancelled	user
BH	Burglary A. rest.	Alarm condition eliminated	
BI	Burglary T. rest.	Trouble condition eliminated	zone
BR	Burglary restoral	Alarm/trouble condition eliminated	zone
BS	Burglary supervisory.	Unsafe intrusion detection system condition	zone
BT		· · · · · · · · · · · · · · · · · · ·	zone
	Burglary trouble	Burglary zone activated during testing	zone
BU	Burglary unbypass	Zone bypass has been removed	zone
BV	Burglary Verified	More than 3 burglary zones have been triggered	zone
BX	Burglary test	Burglary zone activated during testing	zone
CA	Automatic closing	System armed automatically	area
CE	Closing extend	Extend closing time	user
CF	Forced closing	System armed, some zones not ready	user
CG	Close area	System has been partially armed	user
CI	Fail to close	An area has not been armed at the end of the closing window	user
CJ	Late close	An area was armed after the closing window	user
CK	Early close	An area was armed before the closing window	user
CL	Closing report	System armed normal	user
СР	Automatic closing	System armed automatically	user
CR	Recent Closing	An alarm occurred within five minutes after the system was closed	user
CS	Closing switch	Account has been armed by Keyswitch	zone
СТ	Late to open	System was not disarmed on time	area
CW	Was force armed	Header for a force armed session, forced point msg. may follow	area
CZ	Point closing	A point, as opposed to a whole area or account, has closed.	Zone
DC	Access closed	Access to all users prohibited	door
DD	Access denied	Access denied, unknown code	door
DF	Door forced	Door opened without access request	door
DG	Access granted	Door access granted	door
DK	Access lockout	Access denied, known code	door
DO	Access open	Access to authorised users allowed	door
DR	Door restoral	access alarm/trouble condition eliminated	door
DS	Door station	Identifies door for next report	door
DT	Access trouble	Access system trouble	unused
DU	dealer ID	Zone description gives dealer ID #	dealer ID
EA	Exit Alarm	an exit zone remained violated at the end of the exit delay period	zone
EE	Exit error	an exit zone remained violated at the end of the exit delay period	user
ER	Expansion rest.	Expansion device trouble eliminated	expander #
ET	Expansion trouble	Expansion device trouble	expander #
FA	Fire alarm	Fire condition detected	zone



FB	Fire bypass	Zone has been bypassed	zone
FH	Fire Alarm restore	Alarm condition eliminated	zone
FI	Fire test begin	The transmitter area's fire test has begun	area
FJ	Fire Trouble restore	Trouble condition eliminated	zone
FK	Fire test end	The transmitter area's fire test has ended	area
FR	Fire restoral	Alarm/trouble condition has been eliminated	zone
FS	Fire supervisory	Unsafe fire detection system condition	zone
FT	Fire trouble	Zone disabled by fault	zone
FU	Fire unbypass	Bypass has been removed	zone
FX	Fire test	Fire zone activated during test	zone
FY	Missing fire Trouble	A fire point is now logically missing	zone
GA	Gas alarm	Gas alarm condition detected	zone
GB	Gas bypass	Zone has been bypassed	zone
GH	Gas A. restore	Alarm condition eliminated	zone
GJ	Gas T. restore	Trouble condition eliminated	zone
GR	Gas restoral	Alarm \ trouble condition has been eliminated	zone
GS	Gas supervisory	Unsafe gas detection system condition	zone
GT	Gas trouble	Zone disabled by fault	zone
GU	Gas unbypass	Bypass has been removed	zone
GX	Gas test gas	Zone activated during test	zone
HA	Hold-up alarm	Silent alarm, user under duress	zone
HB	Hold-up bypass	Zone has been bypassed	zone
HH	Hold-up A. rest.	Alarm condition eliminated	zone
HJ	Hold-up T. rest.	Trouble condition eliminated	zone
HR	Hold-up restoral	Alarm \ trouble condition eliminated	zone
HS	Hold-up supervisory.	Unsafe holdup system condition	zone
HT	Hold-up trouble	Zone disabled by default	zone
HU	Hold-up unbypass	Bypass has been removed	zone
JA	User code tamper	Too many unsuccessful attempts have been made to enter a	area
011		user ID	ureu
JD	Date changed	The date was changed in the transmitter/receiver	user
JH	Holiday changed	The transmitter's holiday schedule has been changed	user
JL	Log threshold	The transmitter's log memory has reached its threshold level	unused
JO	Log overflow	The transmitter's log memory has overflowed	unused
JR	Schedule execute	An automatic scheduled event was executed	area
JS	Schedule change	An automatic schedule was changed	user
JT	Time changed	The time was changed in the TX\RX	user
JV	User code change	A user's code has been changed	user
JX	User code delete	A user's code has been removed	user
KA	Heat alarm	High temperature detected on premise	zone
KB	Heat bypass	Zone has been bypassed	zone
KH	Heat Alarm restore	Alarm condition eliminated	zone
KJ	Heat Trouble restore	Trouble condition eliminated	zone
KR	Heat restoral	Alarm/Trouble condition has been eliminated	zone
KS	Heat supervisory	Unsafe heat detection system condition	zone
KT	Heat trouble	Zone disable by fault	zone
KU	Heat unbypass	Bypass has been removed	zone
LB	Local program	Begin local programming begin	unused
LD	Local program Denied	access code incorrect	unused



LE	Listen-in ended	The listen-in session has been terminated	unused
LF	Listen-in begin	The listen-in session with the receiver has begun	unused
LR	Phone line rest.	Phone line restored to service	line
LS	Local program	Local programming successful	unused
LT	Phone line Trouble	Phone line report	line
LU	Local program fail	Local programming unsuccessful	unused
LX	Local program ended	A local programming session has been terminated	unused
MA	Medical alarm	Emergency assistance request	zone
MB	Medical bypass	Zone has been bypassed	zone
MH	Medical Alarm restore	Alarm condition eliminated	zone
MJ	Medical T. rest.	Trouble condition eliminated	zone
MR	Medical restoral	Alarm/trouble condition has been eliminated	zone
MS	Medical supervisory	Unsafe system condition exists	zone
MT	Medical trouble	Zone disabled by fault	zone
MU	Medical unbypass	Bypass has been removed	zone
NA	No activity	There has been no activity for a programmed amount of time	unused
NF	Forced perimeter arm	Some zones/points not ready	area
NL	Perimeter armed	An area has been perimeter armed	area
OA	Automatic opening	System has disarm automatically	area
OA OC	Cancel report	Untyped zone cancel	user
OG	Open area	System has been partially disarmed	
OI	Fail to open	An area has not been armed at the end of the opening window	area area
OJ	1	An area was disarmed after the opening window	
OK	Late open Early open		user
OR		An area was disarmed before the opening window Account was disarmed	user
OP	Opening report Disarm from alarm		user
OK		Account in alarm was reset/disarmed	user
OT	Opening Keyswitch	account has been disarmed by Keyswitch	zone
	Late to close	System was not armed on time	user
OZ PA	Point opening	A point, rather than a full area or account, disarmed	zone
	Panic alarm	Emergency assistance request, manually activated	zone
PB	Panic bypass	Panic zone has been bypassed	zone
PH	Panic Alarm restore	Alarm condition eliminated	zone
PJ	Panic Trouble restore	Trouble condition eliminated	zone
PR	Panic restoral	Alarm/trouble condition has been eliminated	zone
PS	Panic Supervisory	Unsafe system condition exists	zone
PT	Panic trouble	Zone disabled by fault	zone
PU	Panic unbypass	Panic zone bypass has been removed	zone
QA	Emergency alarm	Emergency assistance request	zone
QB	Emergency bypass	Zone has been bypassed	zone
QH	Emergency. A. rest.	Alarm condition has been eliminated	zone
QJ	Emergency. T. rest.	Trouble condition has been eliminated	zone
QR	Emergency. Restoral	Alarm/trouble condition has been eliminated	zone
QS	Emergency. Supervisory	Unsafe system condition exists	zone
QT	Emergency Trouble	Zone disabled by fault	zone
QU	Emergency. Unbypass	Bypass has been removed	zone
RA	Remote Programmer Called failed	Transmitter failed to communicate with the remote programmer	unused
RB	Remote Program begin	Remote programming session initiated	unused
RC	Relay close	The relay specified in the address field (optional) has energised	relay



RD	Remote Program Denied	Access passcode incorrect	unused
RN	Remote reset	A transmitter was reset via a remote programmer	unused
RO	Relay open	The relay specified in the address field (optional) has de-	relay
		energised	
RP	Automatic test	Automatic communication test report	unused
RR	Power up	System lost power, is now restored	unused
RS	Remote Program success	Remote programming successful	unused
RT	Data lost	Dialer data lost, transmission error	line
RU	Remote Program fail	Remote programming unsuccessful	unused
RX	Manuel test	Manuel communication test report	user
SA	Sprinkler alarm	Sprinkler flow condition exist	zone
SB	Sprinkler. Bypass	Sprinkler zone has been bypassed	zone
SH	Sprinkler. Alarm restore	Alarm condition eliminated	zone
SJ	Sprinkler. Trouble restore	trouble condition eliminated	zone
SR	Sprinkler. Restore	Alarm/Trouble condition has been eliminated	zone
SS	Sprinkler. supervisory.	Unsafe sprinkler system condition	zone
ST	Sprinkler. Trouble	Zone disabled by fault	zone
SU	Sprinkler. unbypass	Sprinkler zone bypass has been removed	zone
ТА	Tamper alarm	Alarm equipment enclosure opened	zone
ТВ	Tamper bypass	Tamper detection has been bypassed	zone
TE	Test end	Communicator restored to operation	unused
TR	Tamper restoral	Alarm equipment enclosure has been closed	zone
TS	Test start	Communicator taken out of operation	unused
TU	Tamper unbypass	Tamper detection bypass has been removed	zone
TX	Test Report	an unspecified (manual or automatic) communicator test	zone
UA	Untyped zone Alarm	Alarm condition from zone of unknown type	zone
UB	Untyped zone Bypass	Zone of unknown type has been bypassed	zone
UH	Untyped Alarm restoral	Alarm condition eliminated	zone
UJ	Untyped Trouble restoral	Trouble condition eliminated	zone
UR	Untyped zone restoral	Alarm/Trouble condition eliminated from zone of unknown	zone
	<i></i>	type	
US	Untyped zone sup.	Unsafe condition from zone OK unknown type	zone
UT	Untyped zone Trouble	Trouble condition from zone of unknown type	zone
UU	Untyped zone unbypass	Bypass on zone of unknown type has been removed	zone
UX	Undefined	An undefined alarm condition has occurred	unused
UY	Untyped missing Trouble	A point which was not armed is now logically missing	zone
UZ	Untyped missing Alarm	A point which was armed is now logically missing	zone
VI	Printer paper in	Transmitter or receiver paper in, printer X	printer
VO	Printer paper out	Transmitter or receiver paper out, printer X	printer
VR	Printer restore	Transmitter or receiver trouble restored, printer X	printer
VT	Printer trouble	Transmitter or receiver trouble, printer X	printer
VX	Printer test	Transmitter or receiver test, printer X	printer
VY	Printer on line	The receiver's printer is now on line	unused
VZ	Printer off line	The receiver's printer is now off line	unused
WA	Water alarm	Water detected at protected premise	zone
WB	Water bypass	Water detection has been bypassed	zone
WH	Water alarm restoral	Alarm condition eliminated	zone
WJ	Water trouble restoral	Trouble condition eliminated	zone
WR	Water restoral	Alarm/Trouble condition has been eliminated	zone



WS	Water supervisory	Unsafe water detection system condition	zone
WT	Water trouble	Zone disable by fault	zone
WU	Water unbypass	Water detection bypass has been removed	zone
XE	Extra point	The panel has sensed an extra point not specified for this site	point
XF	Extra RF point	The panel has sensed an extra RF point not specified for this site	point
XI	Sensor reset	A user has reset a sensor	zone
XR	TX battery restoral	Low battery has been corrected	zone
XT	TX battery trouble	Low battery in wireless transmitter	zone
XW	Forced point	A point was forced out of the system at arm time	zone
YB	Busy seconds	Percent of time receiver's line card is on-line	line
YC	Communication fail	Receiver and transmitter	unused
YD	RX line card trouble	A line card identified by the passed address is in trouble	line
YE	RX line card restoral	A line card identified by the passed address is restored	line
YF	Parameter checksum fail	System data corrupted	unused
YG	Parameter changed	A transmitter's parameters have been changed	unused
YK	Communication Restoral	The transmitter has resumed communication with a receiver	unused
YM	System battery missing	The transmitter/receiver battery is missing	unused
YN	Invalid report	The transmitter has sent a packet with invalid data	unused
YO	Unknown message	An unknown message was received from automation or the printer	unused
YP	Power supply trouble	The transmitter/receiver has a problem with the power supply	unused
YQ	Power supply restored	The transmitter/receiver's power supply has been restored	unused
YR	System battery restoral	Low battery has been corrected	unused
YS	Communication trouble	Receiver and transmitter	unused
YT	System battery trouble	Low battery in control/communicator	unused
YW	Watchdog reset	The transmitter created an internal reset	unused
YX	Service required	A transmitter/receiver needs service	unused
YY	Status report	This is a header for an account status report transmission	unused
YZ	Service completed	required transmitter / receiver service completed	mfr defined
ZA	Freeze alarm	Low temperature detected at premise	zone
ZB	Freeze bypass	Low temperature detection has been bypassed	zone
ZH	Freeze A. restore	Alarm condition eliminated	zone
ZJ	Freeze T. restore	Trouble condition eliminated	zone
ZR	Freeze restoral	Alarm/Trouble condition has been eliminated	zone
ZS	Freeze supervisory	Unsafe freeze detection system condition	zone
ZT	Freeze trouble	Zone disabled by fault	zone
ZU	Freeze unbypass	Low temperature detection bypass removed	zone